HOME
DECORATORS
COLLECTION

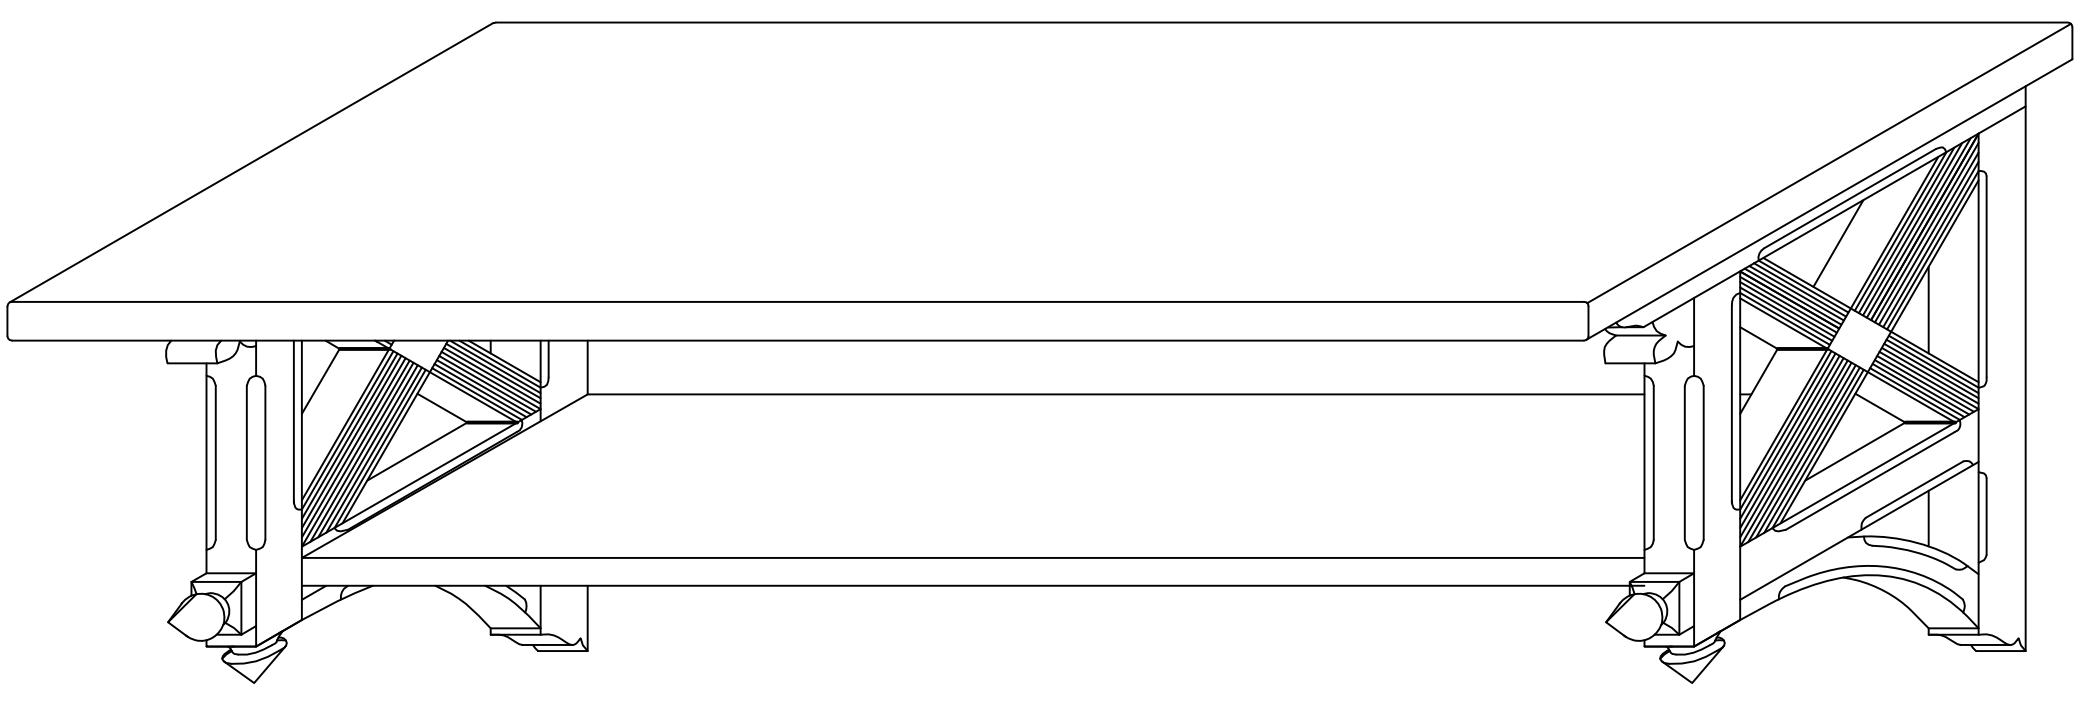
BF-24909 MSL COUNTRY BRACKET LARGE 40W×16"H

INV#10378

ASSEMBLY INSTRUCTIONS

Made In China







MAX LOAD: 50LB.










Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

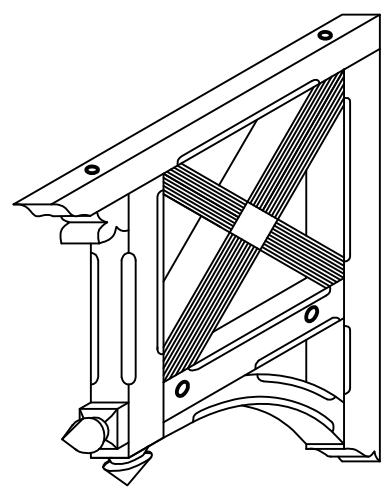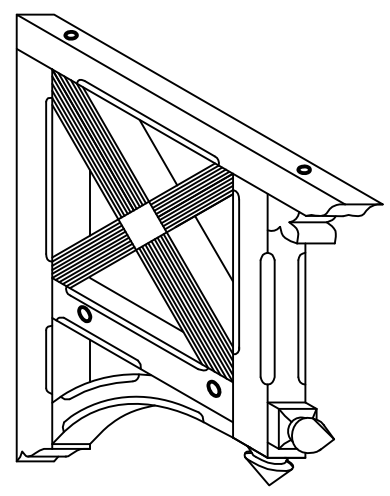
PARTS LIST


A	B	C
		
TOP PANEL-1PC	LEFT SIDE PANEL-1PC	RIGHT SIDE PANEL-1PC
D	E 11mm × 1"	F
		
ACROSS PANEL-1PC	SCREWS-4PCS	ALLEN WRENCH-1PC

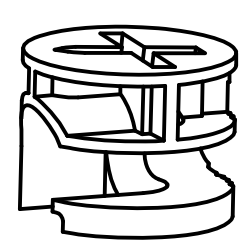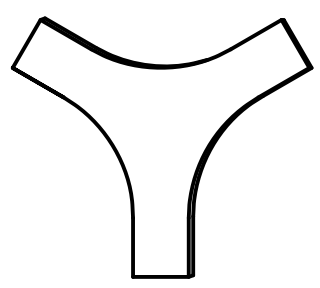G	H 8mm × 1-1/2"	I	J
			
GECKOS-2PCS	SCREWS-2PCS	CAM-BOLTS-4PCS	CAM-LOCKS-4PCS
K	L	M	N
			
CAM-TOOL-1PC	PAPER TEMPLATE-1PC	SCREW COVERS-4PCS	CAM-LOCK CAPS-4PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

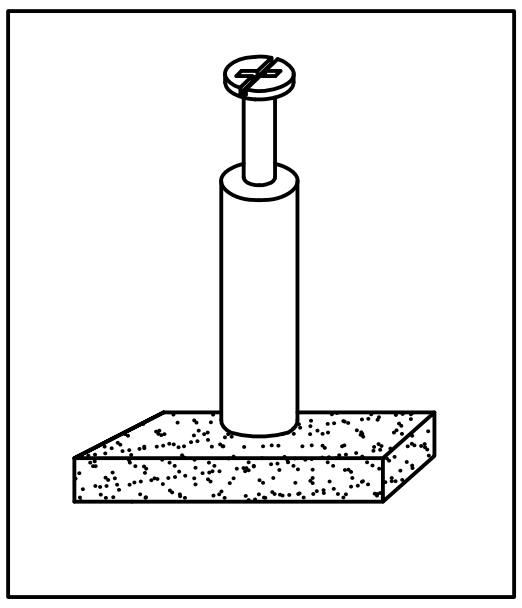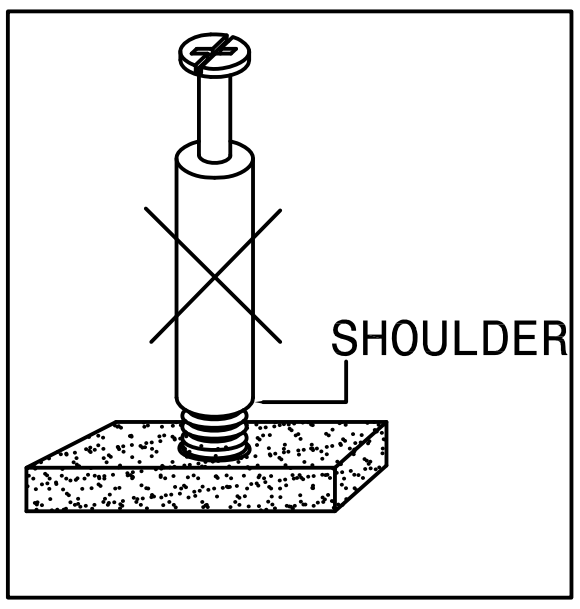
NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.







NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

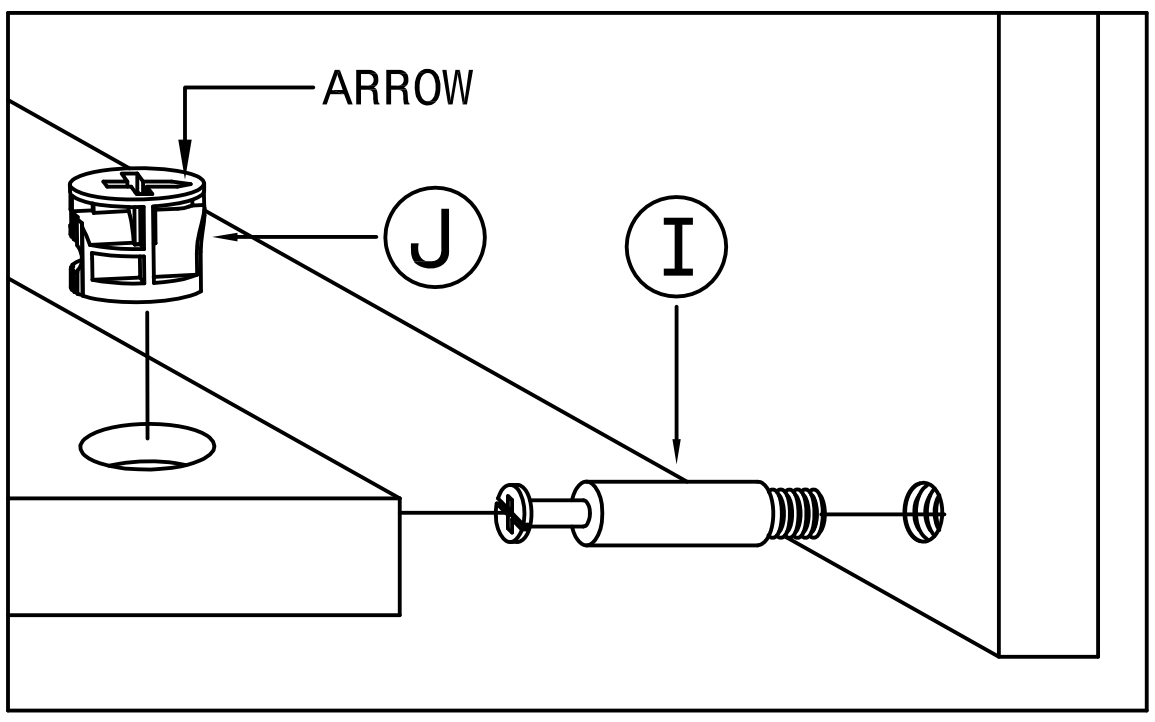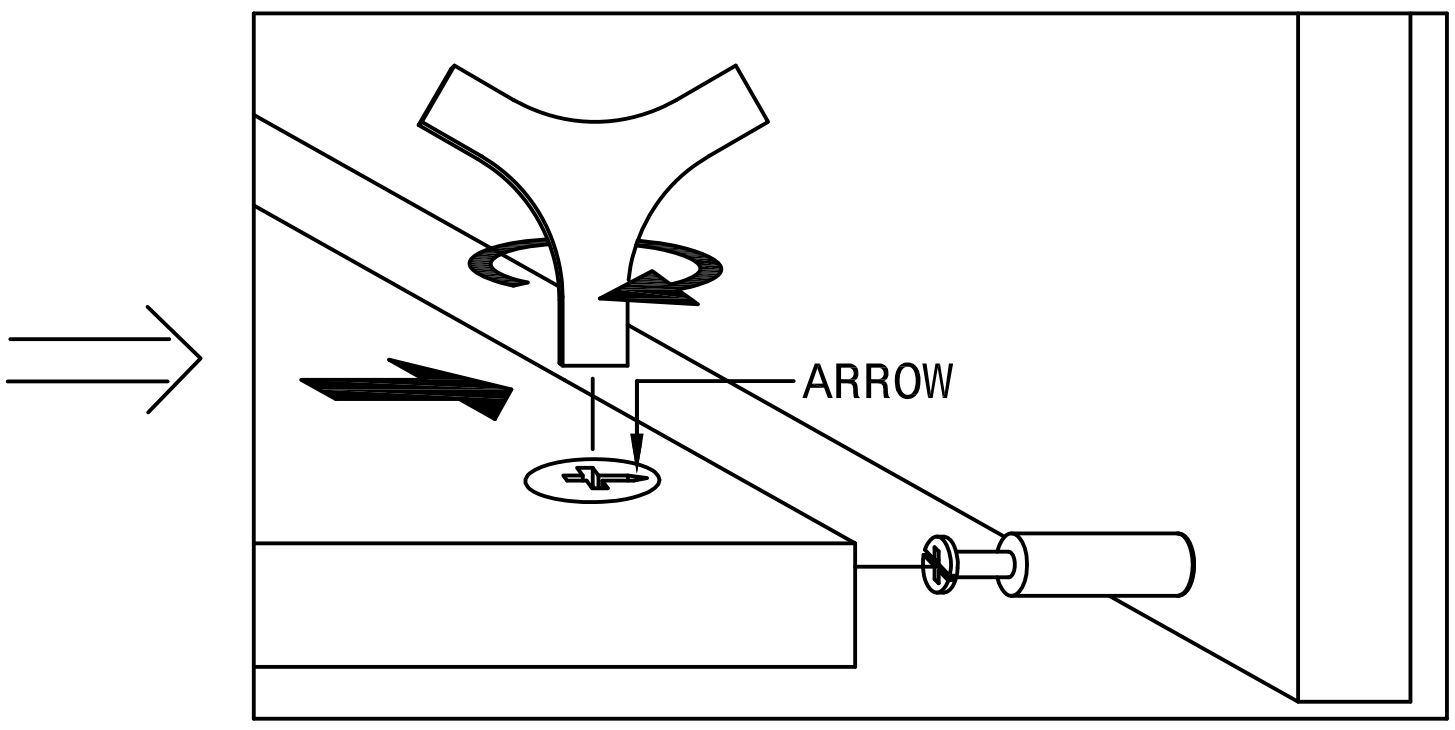HOW TO USE THE CAM-TOOL






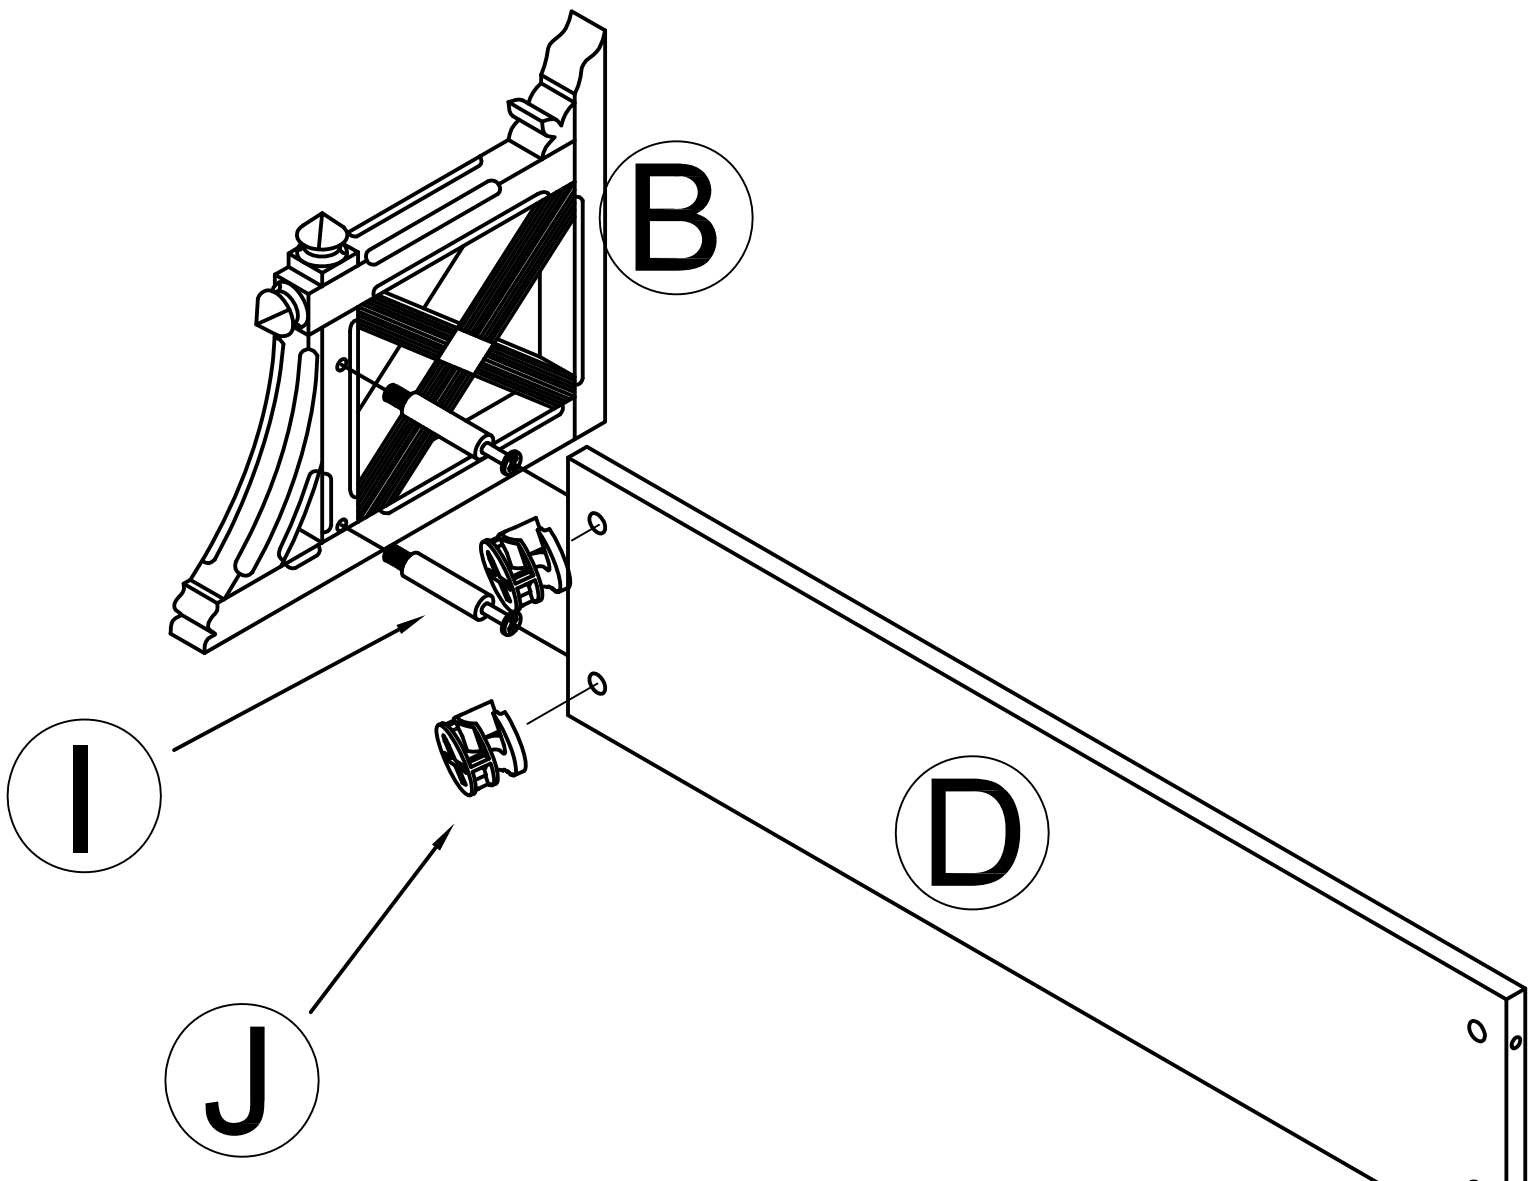NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS




1). ASSEMBLE THE LEFT SIDE PANEL(B).

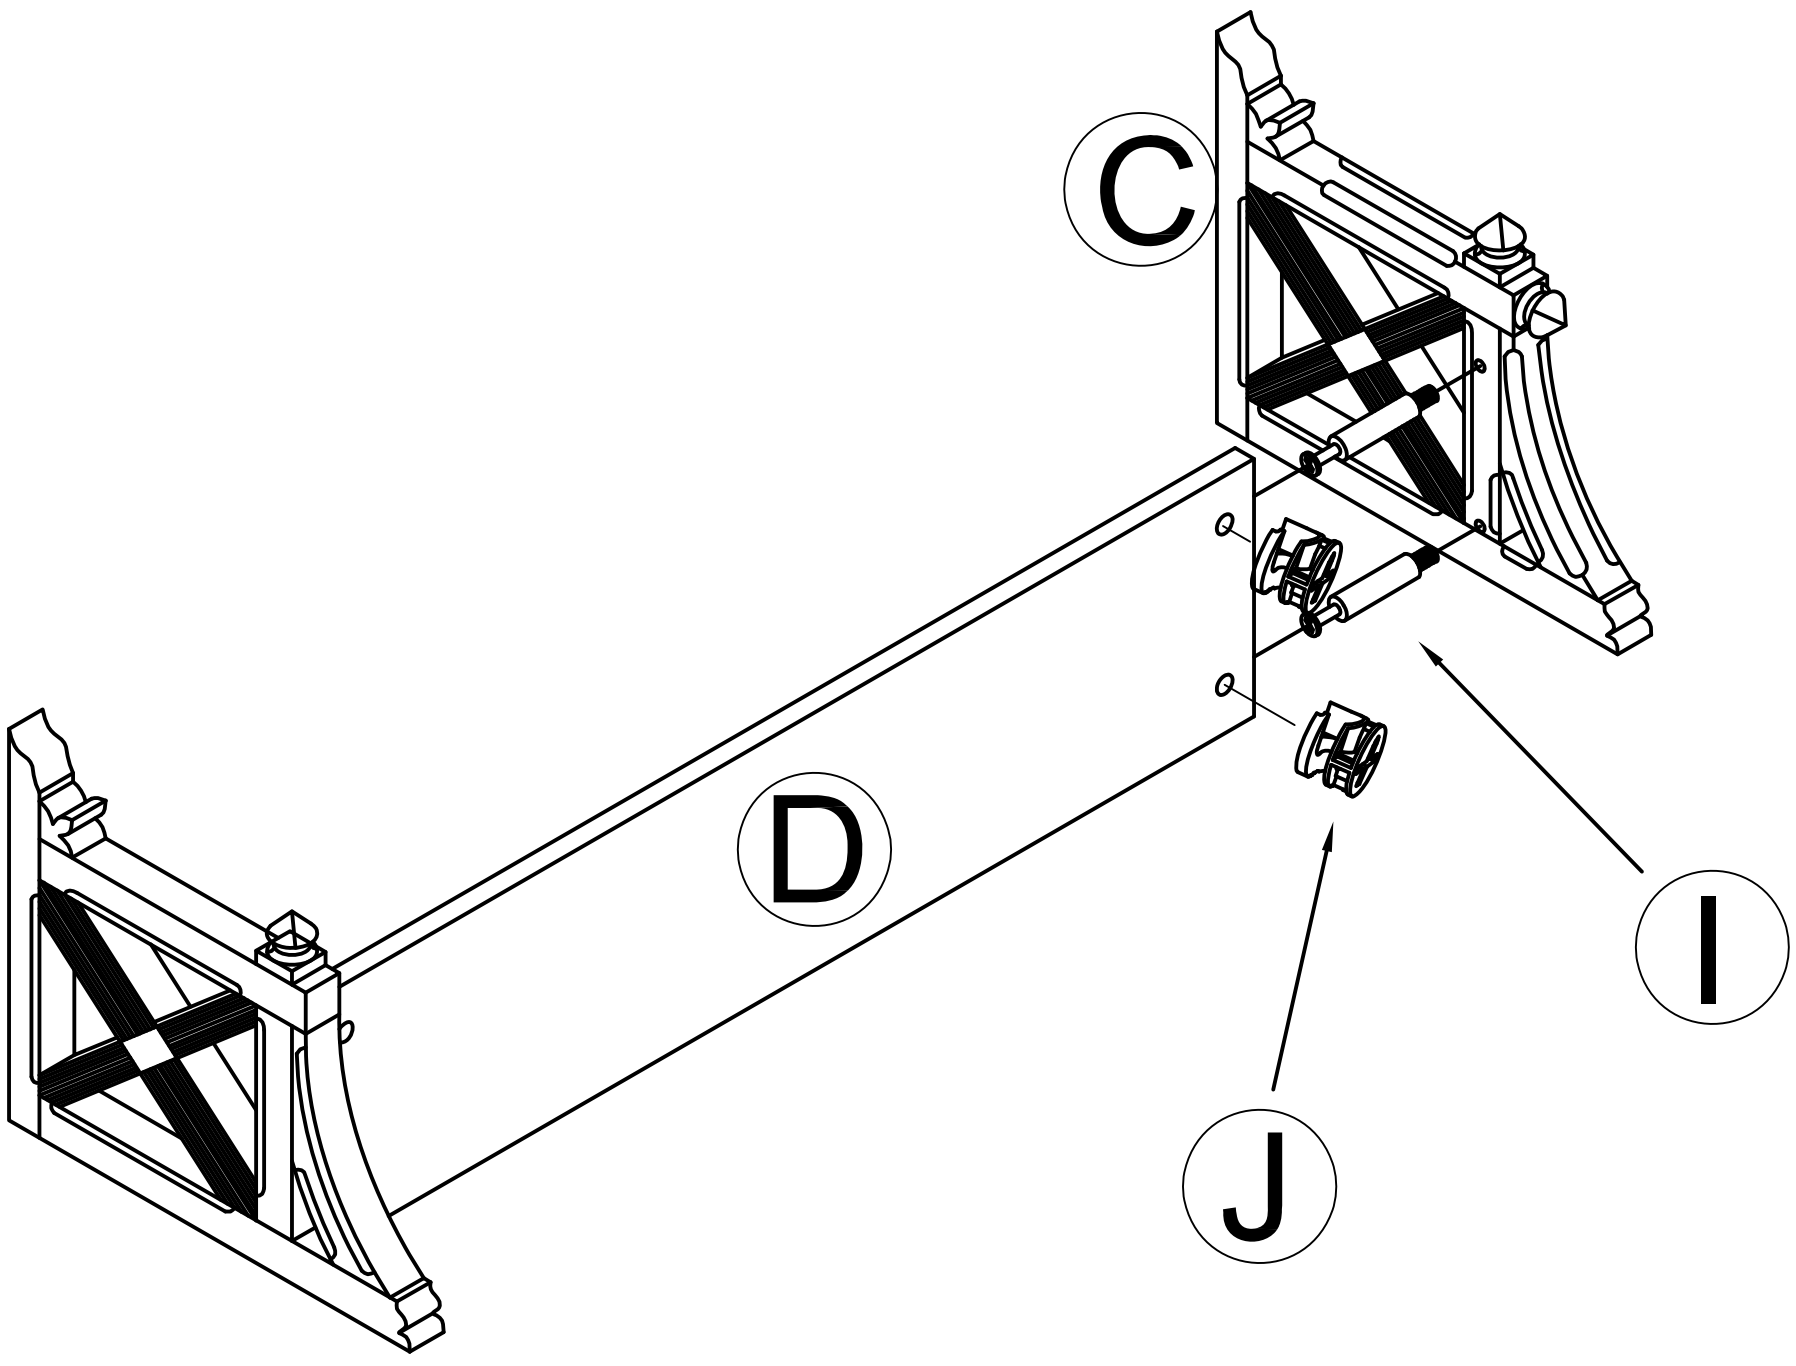- ROTATE 2 CAM-BOLTS(I) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE THE CAM-BOLTS(I) INTO THE HOLES IN THE ACROSS PANEL(D) AND ATTACH USING 2 CAM-LOCKS(J).




2). ASSEMBLE THE RIGHT SIDE PANEL(C).

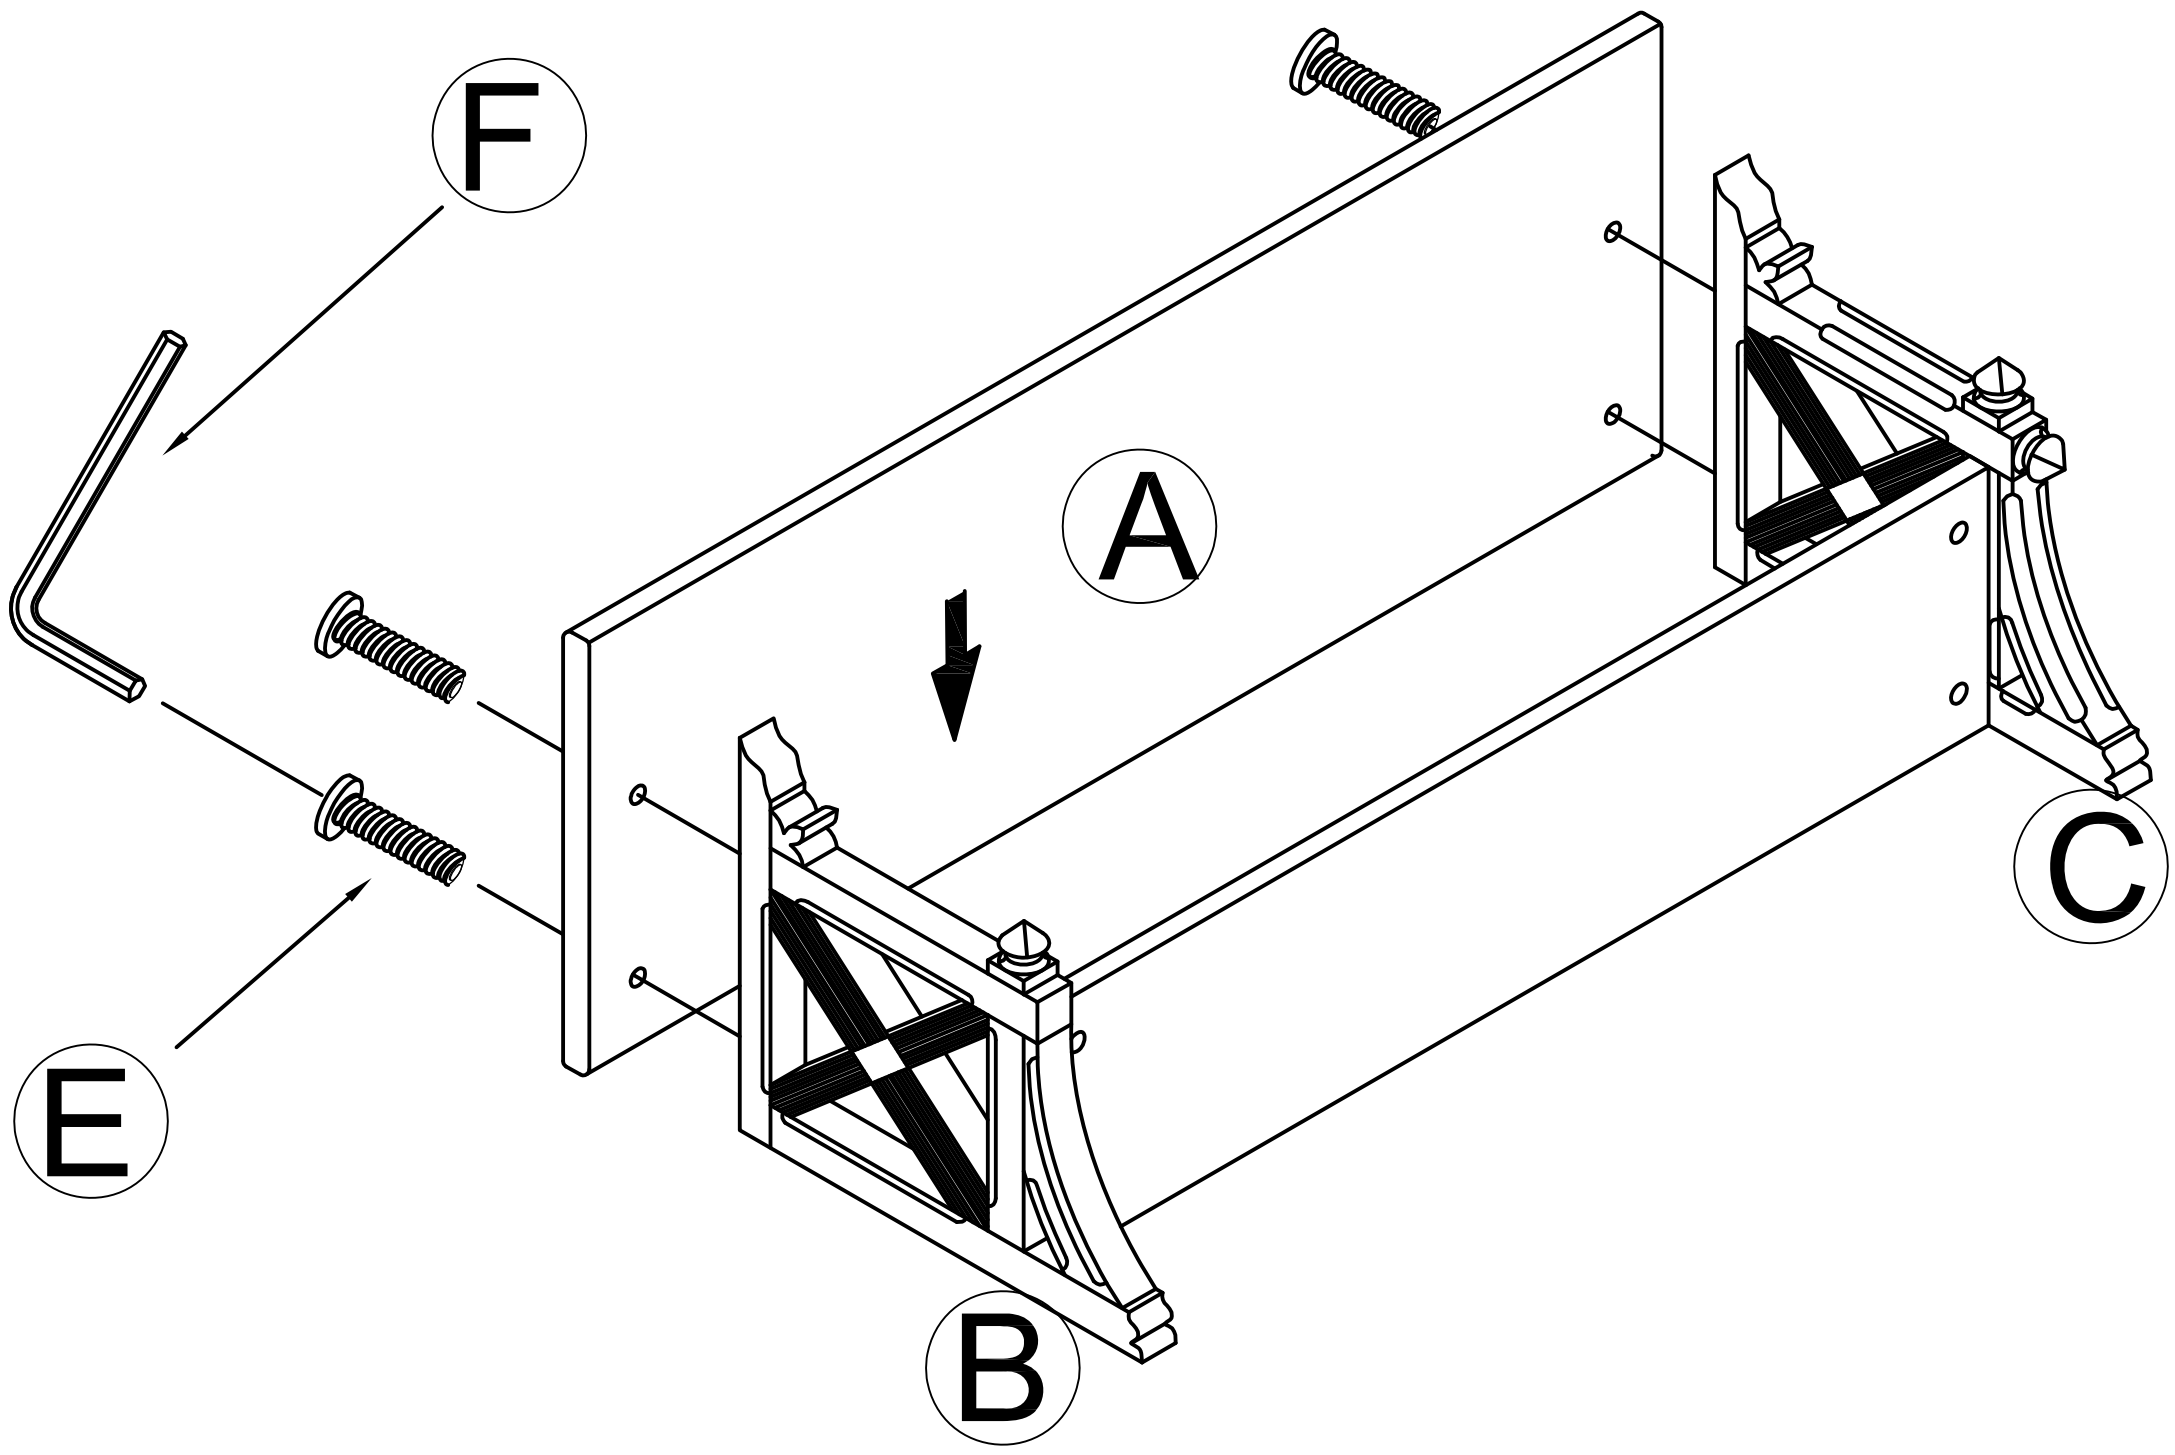- ROTATE 2 CAM-BOLTS(I) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE THE CAM-BOLTS(I) INTO THE HOLES IN THE ACROSS PANEL(D) AND ATTACH USING 2 CAM-LOCKS(J).




3). ASSEMBLE THE TOP PANEL(A).

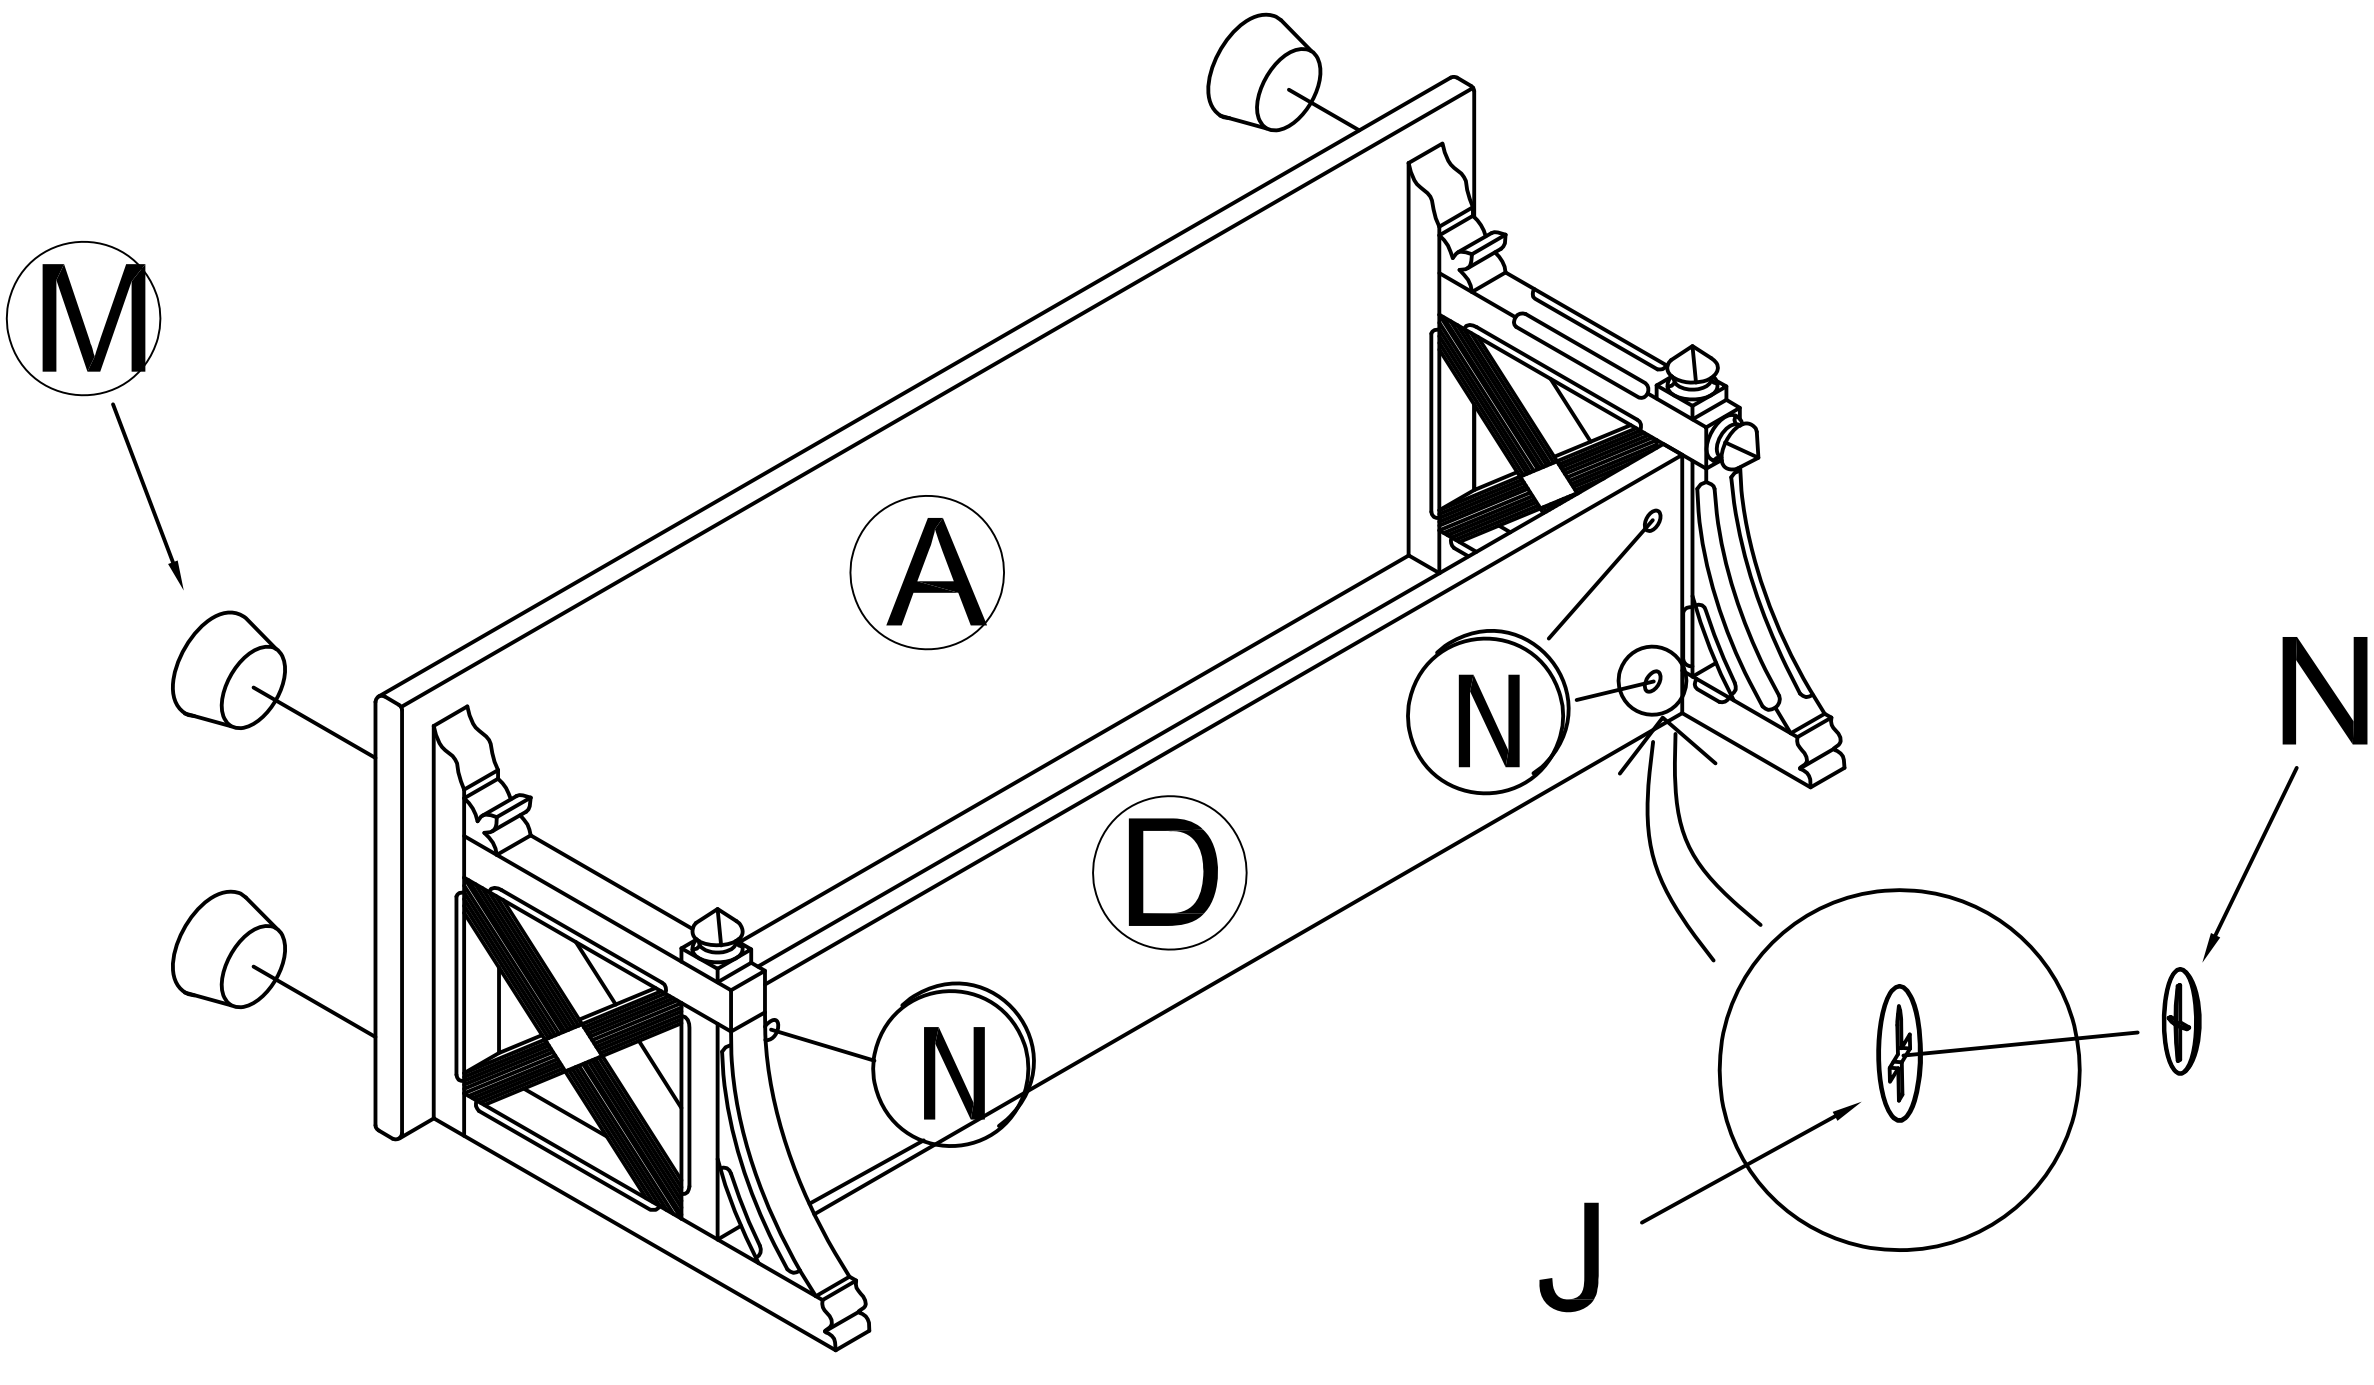- ATTACH THE TOP PANEL(A) TO SIDE PANEL(B/C) AND USING 4 SCREWS(E).




4). ASSEMBLE THE CAM-LOCKS CAP(N) AND SCREW COVERS(M).

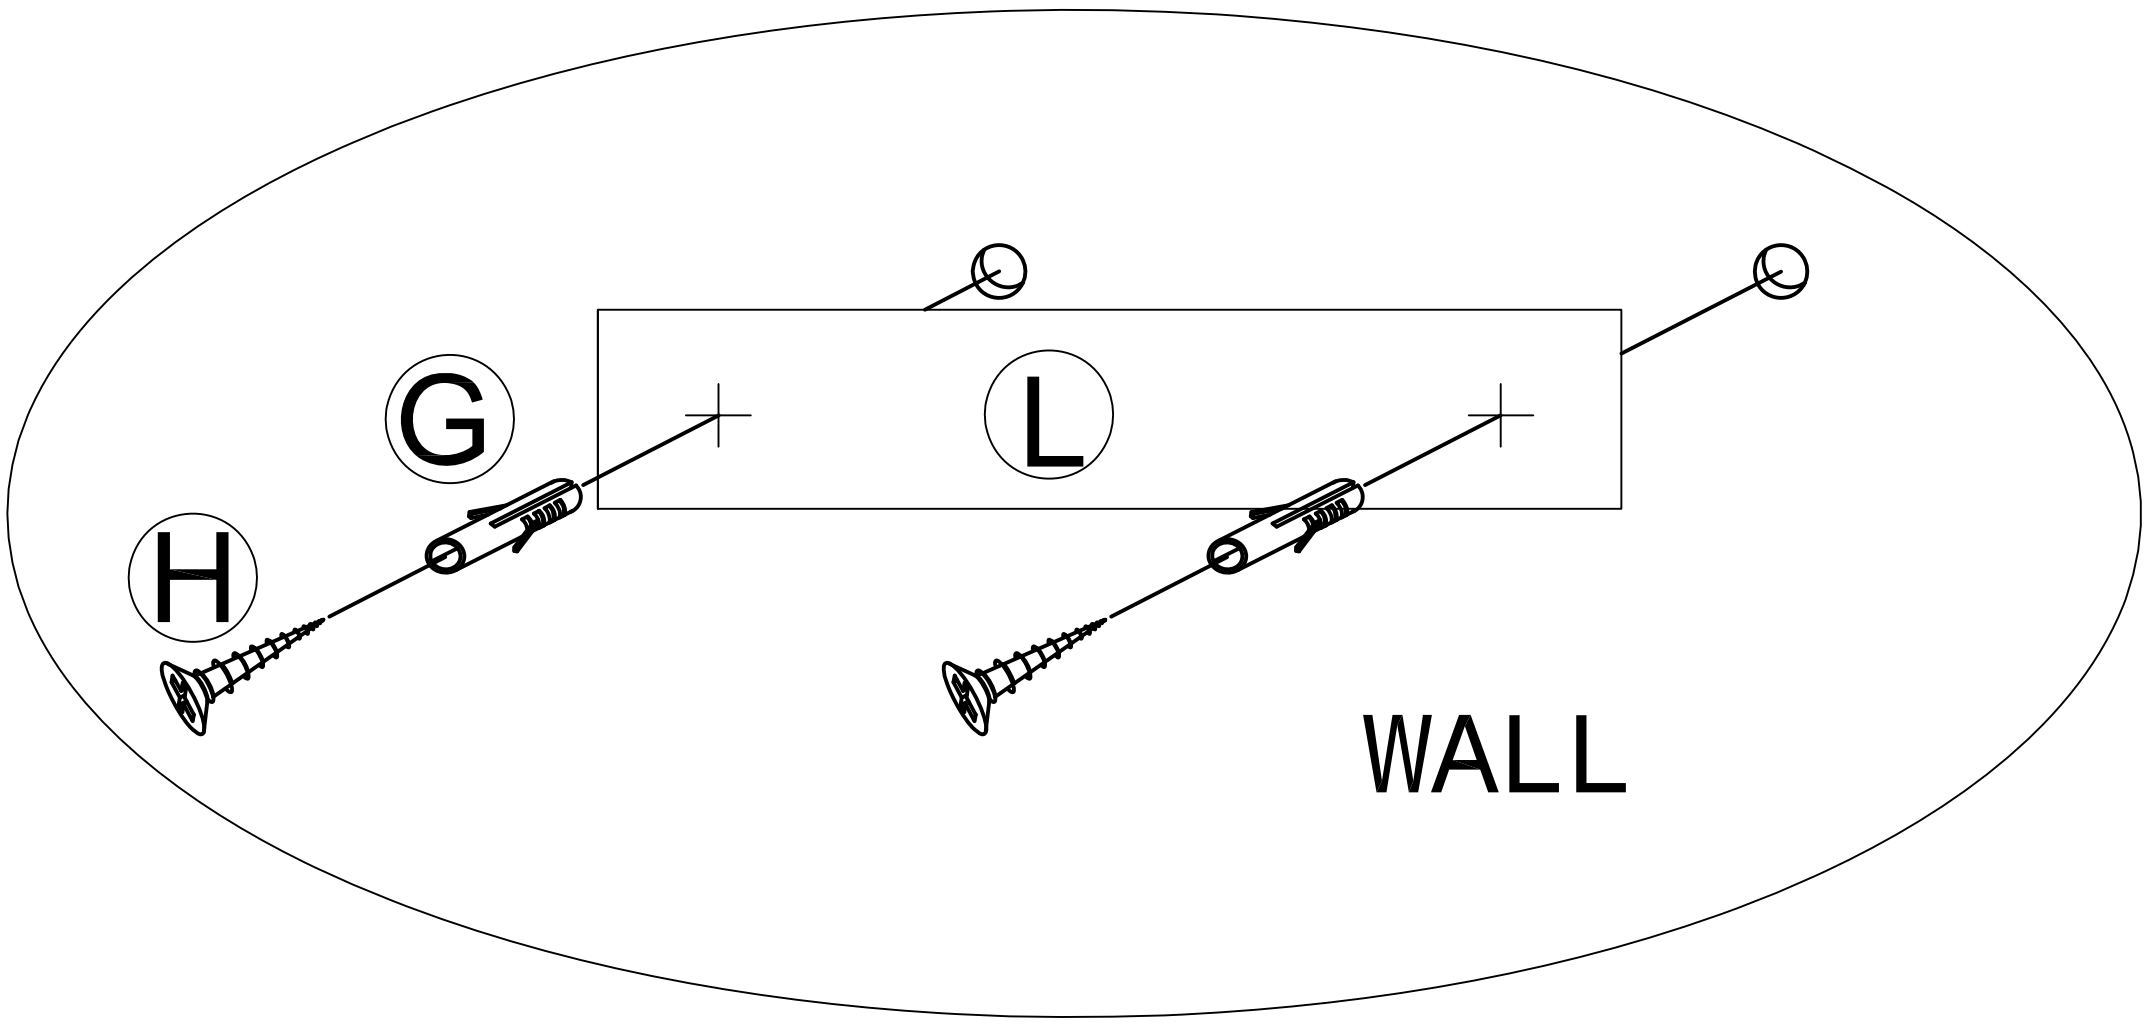- ATTACH 4 CAM-LOCKS(J) USING 4 CAM-LOCK CAPS(N).
- ATTACH 4 SCREW COVERS(M) INTO THE HOLES IN THE TOP PANEL(A).



5). ASSEMBLE THE GECKOS(G).

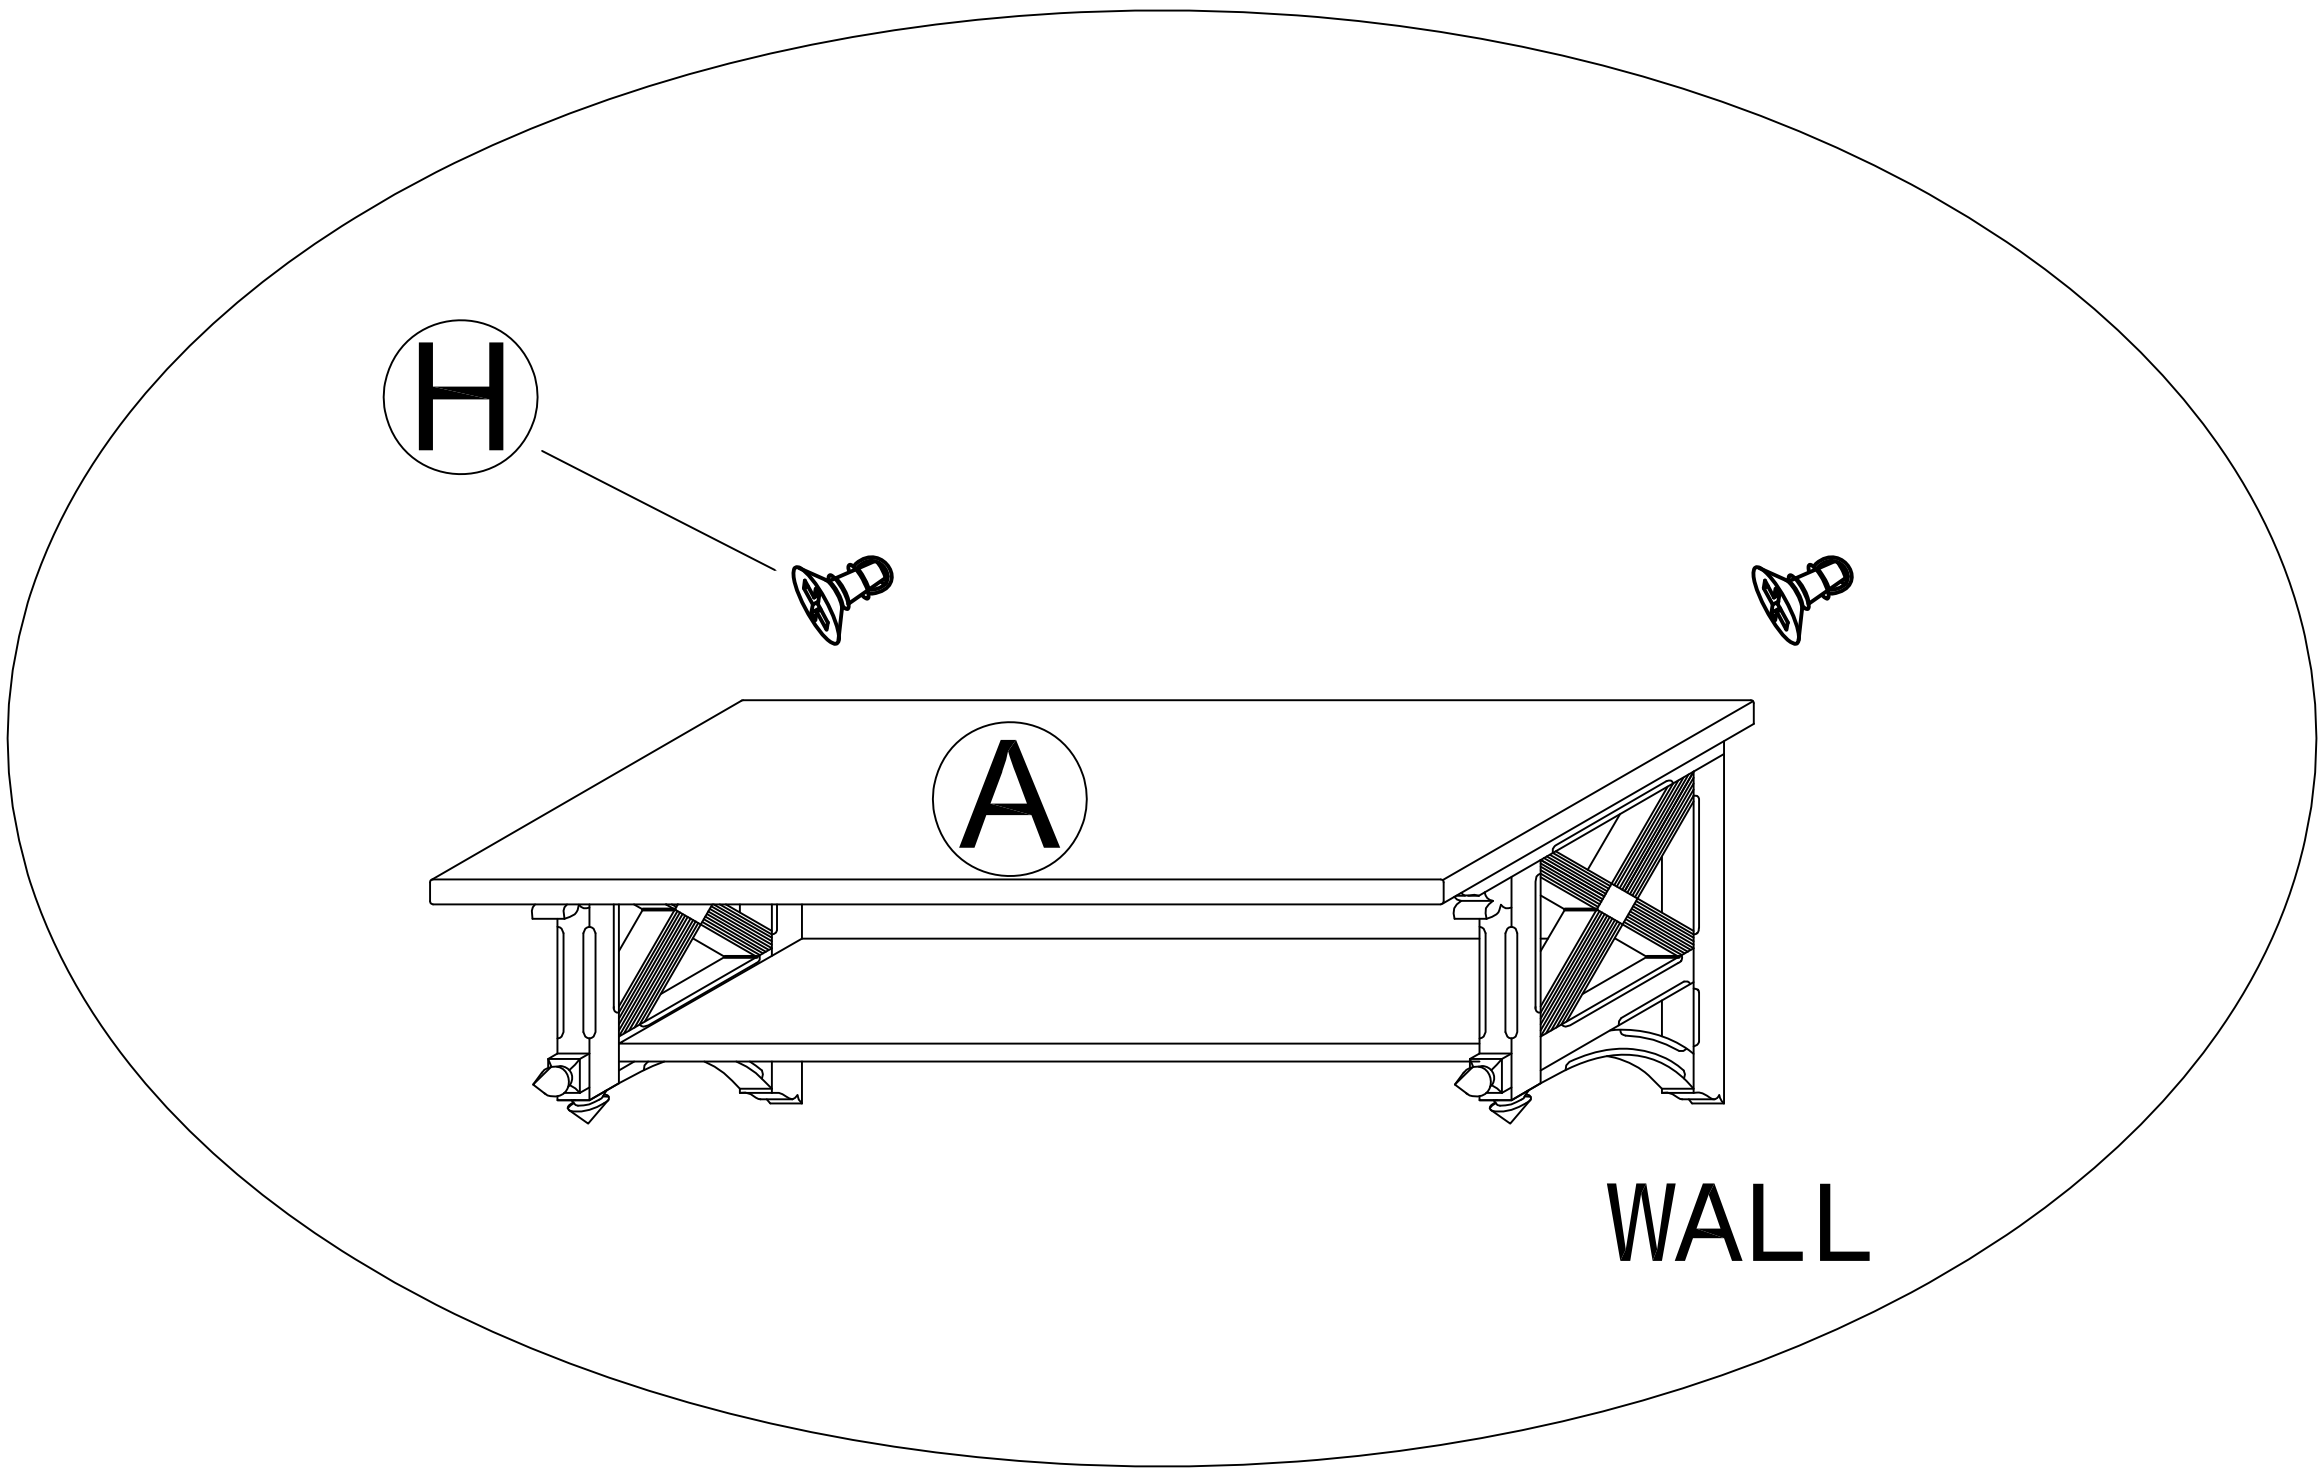- DRILL 2 SMALL HOLES INTO THE WALL EQUAL DISTANCE WITH PAPER TEMPLATE(L) AND AT THE SAME LEVEL.
- PUT 2 GECKOS(G) INTO HOLES IN THE WALL AND ROTATE 2 SCREWS(H) INTO GECKOS(G).



6). ASSEMBLE THE BRACKET.

- HANG BRACKET ON SCREWS(H).